 



INSTRUCTIONMANUAL FOR THE POP UP INSTANT TENTS

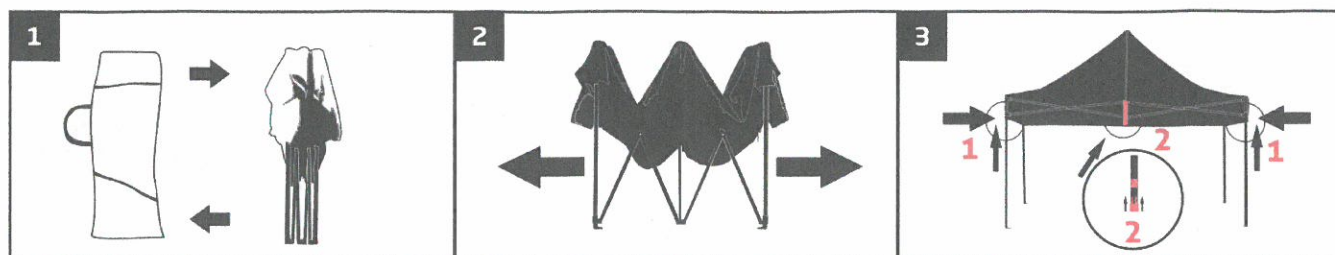

Place the tent bag in a vertical position with a zipper facing upwards. Remove the tent from its protective bag and raise the tent on poles. As a rule, the roofing material is already attached to the poles.

Spread the frame out completely by moving the legs evenly in the opposite direction. It is important to mind the weather conditions at that time, especially the wind.

 (1) Block the frame with the snaps placed on top of the legs.
(2) Canopy may be equipped with buckles which should be used to fix it to the frame. Wrap the canopy around the frame and buckle it.
Attention!!! The buckles should be released before you set up the frame otherwise the construction may be damaged.

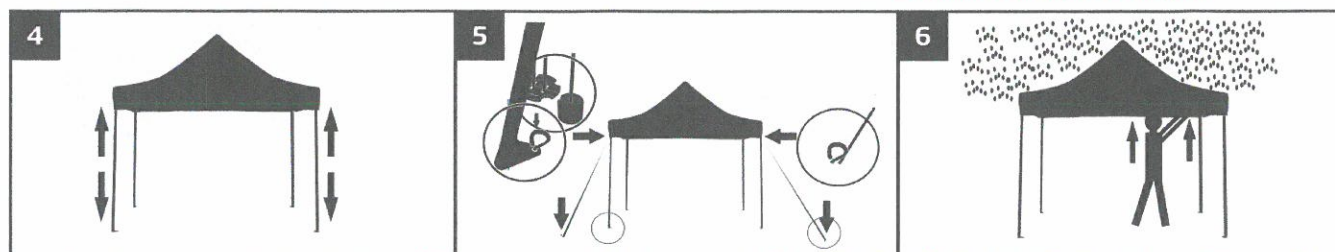

Adjust the poles to your desired height by raising them up or lowering them down.

Secure the tent against the wind (tent pins and weights on all legs, guy ropes with pegs in all corners).

In case of heavy rains, you should not allow the water to gather on the roof canopy. If it happens you should lift the canopy from the inside of the construction so that the water will be removed.


Damage may occur if the instructions are ignored.

ATTENTION

- » Be extra-careful while unfolding the tent - four persons' assistance is advisable.
- » If any problems appear in the process of setting up the tent please locate their source. Any unattended problem can lead to the damage of the frame.
- » Always remember to secure the tent against the high winds by utilizing accessible equipment: guy ropes, pegs, weights, and stakes, etc.
Attention!!!! Keep in mind that protection equipment must be adapted to the weather conditions and the type of ground, which sometimes does not possess the required attributes to secure the fixation units.
- » The tent should not be erected in winds stronger than 25km/h. While erecting the tent in such conditions do not leave the tent unattended and remember that you are doing it at your own responsibility.
- » Any accumulation of snow or ice on top of the tent should be removed. Snow or ice accumulation may jeopardize the life and health of people nearby or damage the construction of the tent.
- » Buckles, which fix the canopy to the frame, should be released before folding the tent.
Attention!!! Damage may occur if the instructions are ignored.
- » If you find a crank under the mast do not use it to tighten the awing. The canvas is designed to remain taut at all times. Putting too much stress on the awing may lead to the breaking of taut spring.
- » Do not fold the roofing until its completely dry. Folding the wet roofing may cause stains and encourage mold and mildew growth.
- » The roofing may be washed only twice in the washing machine (in 30 degrees) with the use of synthetic detergents with the properties similar to soap.
- » As a rule, the roofing has seam sealing in the form of trimming, however, in case of heavy rains complete protection cannot be guaranteed. Complete tightness of the roofing can be archived only by choosing vulcanization of the roofing seams option
Attention!!! To maintain the tightness of the tent check the roofing after each utilization.

INSTRUCTIONMANUAL FOR THE POP UP INSTANT TENTS


Mode: installation of "Standard" sidewalls

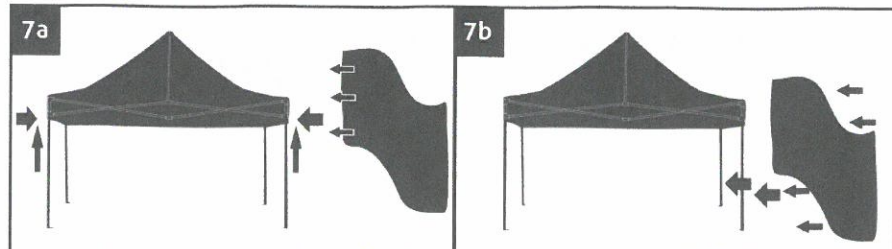

Attach the upper part of the sidewall (with Velcro strip) to the matching strip under the canopy pelmet of the tent.

Attach Velcro strips on the sides of the sidewalls to the poles.

Mode: installation of "Cover" sidewalls

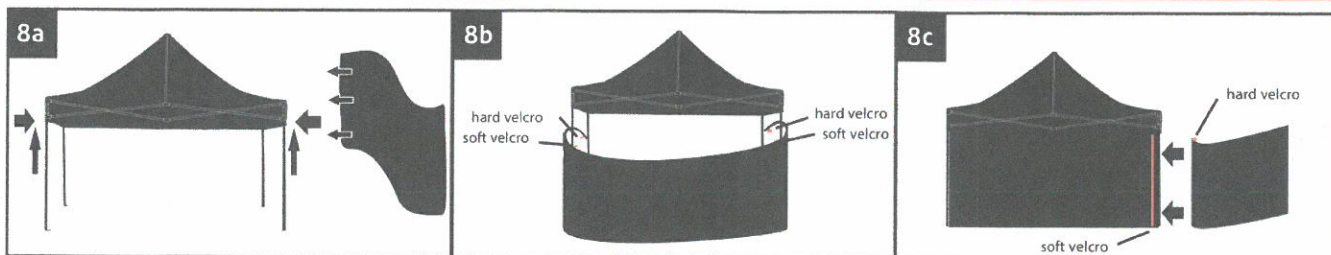

Attach the upper part of the sidewall (with Velcro strip) to the matching strip under the canopy pelmet of the tent.

Wrap the sidewall round the pole and attach hard Velcro strip to soft Velcro strip (located on the back of the sidewall).

While installing the next sidewall, attach its hard Velcro strip (located on the back) to the soft Velcro strip (located on front of the previously installed sidewall). Right side of the sidewall should be installed as shown in picture 8b.

Mode: installation of "Mini" sidewalls




Fold the profiles to attain desired length. Next, insert the crossbar into the upper tunnel of the "mini" sidewall.


Use the attached clips to fix the crossbar to the poles at the optimal height.

Attach Velcro strips on the sides of the sidewalls to the poles.

Mode: installation of additional elements.

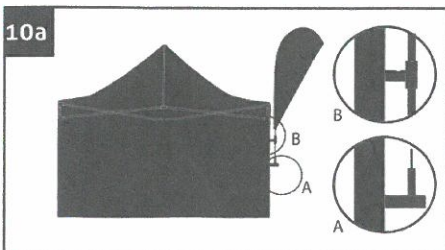

A flag fixed to one of the poles of the tent. Attach the flag holder to the pole with a clip. Next, put the lower part of the flag profile into the holder. To stabilize the flagpole insert a slide slightly over the holder. Put the remaining part of the attached flag into the lower profile and tighten the fabric of the flag.
Attention!!! Only flagpoles recommended by the producer should be installed.

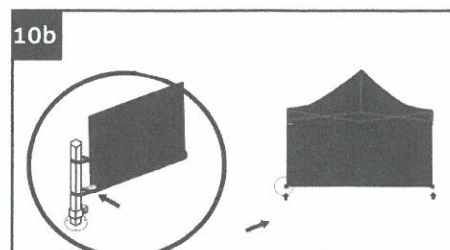

A profile which tightens the sidewall from the bottom. Fold the elements of the profile to attain the desired length and insert the profile to the lower tunnel of the sidewall. Next, use the clips to assemble the tightening profile between the poles of the tent.